

SERIES 1500 INSULATION BLOWER Model 1502

INSTALLATION, OPERATION & MAINTENANCE INSTRUCTIONS



Read this manual carefully before installing, operating, or maintaining this equipment. Failure to do so could result in serious injury or death.

Save this manual



Meyer Pro

1700 Franklin Blvd. • Libertyville, Illinois 60048-4407 • 847-932-6500 • Fax: 847-918-8183
email: sales@wmwmeyer.com • www.meyerpro.com or www.wmwmeyer.com

TABLE OF CONTENTS

| | |
|---------------------------------------|----|
| Safety Precautions | 2 |
| Application and Models | 9 |
| Receiving and Inspection | 9 |
| Specifications and Installation | 10 |
| Machine Operating Instructions | 12 |
| Maintenance | 14 |
| Troubleshooting | 15 |



SECTION I SAFETY PRECAUTIONS

TO THE OWNER, AND INSTALLATION, OPERATION AND MAINTENANCE PERSONNEL

The safety of the operator and those people that may come into contact with the equipment is of great importance to Meyer Pro (“Meyer”, “factory”). The decals, shields, guards, and other protective features designed, furnished, or recommended for this machine are there for your protection. This machine is designed for use with loose fill insulation only. Other material could cause serious injury and will void the warranty. The machine is powered by an internal combustion engine which produces Carbon Monoxide Gas; it must be operated in a well-ventilated area. BEFORE attempting to operate or perform maintenance on this equipment READ carefully and UNDERSTAND all safety instructions contained in this set of Instructions. Failure to do so could result in serious injury or death.


Equipment owner responsibilities


Equipment owners are responsible for understanding the contents of this document and compliance with applicable government laws and regulations and appropriate industry standards. The owner should also contact any associations affiliated with their market for any training, certification, and/or proper procedures (suggested or required), for their particular business. Appropriate safety and equipment training is the responsibility of the owner. The owner/operator is responsible for any hazards related to the material that is being handled by the machines and for ensuring that the users of the equipment have and use the proper Personnel Protective Equipment (PPE). In addition, the owner must create a Lockout/ Tagout procedure for personnel to follow before performing any maintenance on this equipment. This manual is intended to assist the owner in the creation of safety procedures and in the training process. The operation and maintenance of this equipment should be restricted to those trained in its use and possess the expert knowledge to perform maintenance.


Operation and Maintenance personnel responsibilities


Personnel that are operating or maintaining this equipment must READ carefully and UNDERSTAND the sections of this **Instruction Manual** relevant to the work they are performing. The various precautions and recommendations detailed within this manual are not necessarily all-inclusive. These instructions are intended to provide general safety and operational guidance relating to typical uses with which Meyer is familiar. If you have any safety or operational questions pertaining to the design or application of the equipment, we encourage you to contact Meyer at (847) 932-6500.

SIGNAL WORD DEFINITIONS


 **DANGER** Indicates a hazardous situation which, if not avoided, will result in death or serious injury.

 **WARNING** Indicates a hazardous situation which, if not avoided, could result in death or serious injury.

 **CAUTION** Indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.

 **NOTICE** Indicates information that is important, which if not followed, may cause damage to the equipment.

IMPORTANT SAFETY INFORMATION

 **WARNING** To reduce the risk of serious injury or death:

Be Qualified.

- Operation of this equipment must be limited to those that are properly trained in its use.
- Servicing or maintaining this equipment must be performed by trained maintenance personnel only.

Read all safety information.

- Obey all **safety labels** on the equipment. Do not remove any safety labels. If the equipment is missing any labels (see “Safety Labeling” section), contact Meyer immediately and before putting the equipment into service.
- Read and understand all the **safety related information contained in this manual** and the **Engine manual** prior to attempting to perform any work with or on this equipment.

Heavy - handle safely. The weight of this equipment and its component parts could cause serious injury if dropped or mishandled during installation, service, or maintenance. Always use safe handling and rigging methods.

Operate in a well-ventilated area. The carbon monoxide from the engine exhaust is an odorless, colorless, poison gas. If inhaled can lead to carbon monoxide poisoning resulting in serious injury or death.

When using the machine, make sure the truck or trailer is parked outside and never in a building or garage.

Guard and avoid dangerous parts. There are moving parts of this equipment that will crush and cut any body part that they contact, resulting in serious injury or death. **Never** operate the machine without all guards properly installed.

Hopper Opening must only have material loaded into it. Hands, arms, and other body parts should never enter the hopper opening.

Never open access covers/door or reach inside the equipment for any reason while it is in operation. Any accessory or auxiliary components installed with this equipment must have protective guarding correctly installed and permanently fastened in place.

Be Aware that the equipment can be started remotely, without warning.

Always have (1) person at the machine while it is running. They **must** be trained in its proper use, able to maintain control over people interacting with the equipment, and be close enough to turn it off in case of an emergency.

Never blow insulation on or near sources of heat, flame, or sparks.

Follow Machine Safety Shutdown Instructions before removing any guards, performing maintenance, or making any adjustments, clearing material, investigating a malfunction, or cleaning the equipment.

Keep hands, feet, or other body parts, loose clothing, jewelry, etc., **clear** of the hopper inlet and material discharge. **Never** disconnect the material hose while the machine is running or **direct** discharged materials at others.

Lockout/Tagout all sources of **energy** before installing, servicing, or maintaining this equipment. Potential sources of energy include but are not limited to: motors, switches, cylinders, and solenoids. Also consider:

- Equipment may start remotely, without warning, if energized.
- Hazardous voltage presents the risk of electrical shock.
- Equipment surfaces may be hot; allow them to cool before performing any work.

Push the E-Stop button if something unforeseen occurs. This will completely stop the machine and illuminate the Red Panel Light. Before restarting the machine close the slide gate and turn the Remote Control panel switch to “OFF”.

Wear the proper PPE (Personal Protective Equipment) Personnel using the machine must always wear appropriate clothing and equipment for the work environment as defined by local, state, and federal safety requirements, including but not limited to:

- Hearing Protection
- Eye Protection (goggles or safety glasses)
- Breathing Protection (respirator, filter mask)
- Skin Protection (long sleeved shirts, pants, and gloves) or protective suit

Contact the loose fill insulation manufacturer for any addition PPE requirements.

HAZARD IDENTIFICATION

Principle of operation

The insulation blowing machines that Meyer Pro manufacturers and sells are machines that have rotating shafts with paddles, pins and vanes designed to break up and move compressed material (cellulose and fiberglass) from an open hopper into a pneumatic conveying line. Once in that line or hose, the material is propelled through the hose and exits into an open space (building attic) or an enclosed space (sidewall). Because of the way in which material is loaded into the machine, the hopper must be open and therefore moving parts are accessible. The machine likewise has moving drive train components which must always remain guarded.

Amputation hazard

The insulation blowing machine shafts are driven by an engine/motor at a relatively high speed. The shafts are connected to the engine or motor via roller chains or transmission belts. The spinning shafts and connected drive train components present a serious personal injury hazard, including but not limited to amputation. If any human body part comes in contact with these parts and an immovable object, such as the machine hopper wall, that body part could be cut off.

Exposure to hazards

In order for the insulation machine to function, material must be able to be placed in an open and accessible hopper. It is designed such that material can be put into the hopper without personnel coming into contact with rotating parts. The discharge of the machine is designed to have a hose attached in order for the insulation to be blown where it is required. The discharge of the hose must never be covered by a human hand or other body part and must only be directed to areas where it cannot come in contact with people and/or human body parts. The drive train components are guarded and must remain so when the machine is in operation. There are no adjustments that can be made to the components while the machine is running.

Hydraulic Drive System

A hydraulic system is used to power this machine. It is capable of developing pressures in excess of 1,000 PSI and fluid temperatures above 160° F. Because of this, safety precautions and proper maintenance procedures must be followed. If hydraulic fluid is injected, ingested, or inhaled, a serious medical condition may result requiring immediate medical attention.

Training

The owner bears the responsibility to ensure that personnel who may be working on/or operating the insulation machine are properly trained. Personnel must be aware that: (1) anything coming into contact with the moving parts in the machine hopper could be cut off/amputated; (2) if body parts come in contact with the rotating vanes in the feeder, they will be cut off/amputated; (3) before working on, cleaning, repairing or maintaining a machine, Lockout/Tagout procedures must be strictly followed; and (4) the machine must not be operated without guarding in place. Before interacting with the insulation machines, personnel must read the Operator's Manual.

Safety Labels



WARNING



Machine is operated by remote control and can start at any time.

Moving parts can crush and cut.

Follow Machine Safety Shutdown Instructions (near control panel) before removing guards, servicing, or performing maintenance or when reaching into any work zone to make adjustments, clear product and supplies, clean the equipment, or investigate a malfunction.



Follow all safety instructions to reduce the risk of serious injury or death from electrical shock, moving parts, thrown objects, or other hazards.



Intended use and use environment

This machine is suitable for Loose Fill insulation only. Any other use could cause serious injury, costly damage to the equipment and will void the warranty.

Operate only in well ventilated areas. Failure to do so could result in death due to carbon monoxide poisoning.

Questions regarding safety, operation, and application suitability should be directed to Wm. W. Meyer and Sons, Inc.



Qualifications and responsibilities

Always refer to applicable safety standards and local requirements when using this equipment.

Owner responsibilities:

- Provide operation and maintenance personnel with the Installation, Operation, and Maintenance Instructions (additional copies available from Wm. W. Meyer and Sons, Inc.)
- Make sure personnel are properly trained on equipment use and safety.



Operation and Maintenance Personnel responsibilities:

- Be properly qualified to operate or service the equipment:
 - Read and follow all instructions on the equipment labels and in the Installation, Operation, and Maintenance Instructions, including appropriate supporting vendor information.
 - Never operate or maintain this equipment under the influence of alcohol or drugs or conditions which reduce alertness or judgment.
- Always wear proper hearing, eye and breathing protection along with protective clothing.



Operating location

- An operator must always be close enough to the machine to promptly turn it off in case of emergency.
- Never blow insulation on or near sources of heat, flame, sparks or static discharge.



Keep yourself and others clear of machine and discharge

- Never operate the machine without all guards properly installed.
- Keep hands, feet, hair, loose clothing, jewelry and any foreign objects away from moving parts during operation.
- Never allow untrained personnel in the area near the equipment or the air/material discharge location.
- Never direct discharged materials at bystanders or put hands or objects in the discharge stream.



DO NOT REMOVE or disfigure this or any other instruction/safety label.

1700 Franklin Blvd • Libertyville, Illinois 60048-4407 • 800-797-8227 • 847-918-0111 • Fax: 847-918-8183
e-mail: info@wmwmeyer.com • websites: <http://www.meyercontractor.com> or www.wmwmeyer.com


420Z-262



WARNING

**Hot surface.
Do NOT touch.**

420Z-233



DANGER

**Rotating parts
inside.**

Follow machine safety
shutdown instructions before
service or maintenance.

420Z-249



DANGER

Engines produce **carbon monoxide** which is an odorless deadly poison. **DO NOT OPERATE** in an enclosed area.

420Z-234



WARNING

FIRE Hazard

Disconnect fuel tank when not in use.
Secure tank when transporting machine.
Do not store fuel tank in enclosed space.


420Z-258

MACHINE SAFETY SHUTDOWN INSTRUCTIONS

Before reaching into the machine or performing any service or maintenance, the following steps must be taken to ensure that the machine cannot be started or operated.

1. Follow the Machine Shutdown Instructions.
2. Disconnect the fuel tank and close the vent on the tank.
3. Disconnect the negative battery terminal and secure it.
4. Follow your employer's Lockout/Tagout procedures.

420Z-256

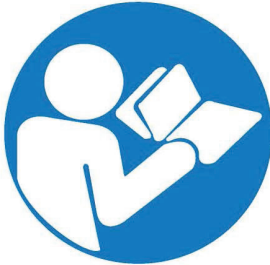

WARNING

To reduce the risk of serious injury or death:

Equipment must be operated, serviced and maintained by trained personnel.

Read and understand all instructions before operating, servicing or maintaining this machine.

WARNING



Hearing protection required



Eye protection required




Breathing protection required



Protective clothing required

420Z-204




WARNING

Hydraulic fluid is flammable. Keep away from heat and ignition sources.

Clean up any spills using only non-sparking tools and explosion proof equipment. Collect spills on absorbent material and put into an approved container.

420Z-301



WARNING

Hydraulic fluid under pressure can cause skin injection injury.

If you suspect an injury, no matter how minor it may seem, get medical attention immediately.

Failure to do so can lead to gangrene and loss of limb.

Follow Machine Safety Shutdown Instructions before any inspections, service or maintenance is performed.

420Z-302



WARNING

Moving parts can crush and cut.

Never operate with guard removed.

Follow machine safety shutdown instructions before service or maintenance.

420Z-253



WARNING

Open all doors on the truck body/trailer and wait 10 minutes before starting engine.

This ventilates fuel vapors and reduces the risk of fire and explosions.

DO NOT start engine if fuel vapors are present.

420Z-258



WARNING

Unprotected material discharge can cause injury.

Always use hose when discharging material.

Never direct discharged materials at bystanders or put hands or objects in the discharge stream.

420Z-217



WARNING

Do not reach into hopper.

Moving parts can crush and cut.

Follow machine safety shutdown instructions before service or maintenance.

420Z-260

HYDRAULIC SYSTEM INSPECTION INSTRUCTIONS

With the truck securely parked and the machine unable to start, inspect the hydraulic system both on the machine and underneath the truck for:

- Leaks
- Loose connections
- Damaged/Worn parts

Replace any damaged or worn parts immediately. Do not operate the machine until after necessary repairs have been made.

If there are any questions about inspecting the hydraulic system, please do not hesitate to contact us at 1-800-963-4458

420Z-300



SECTION II APPLICATION & MODELS

The MEYER PRO Series 1500 INSULATION BLOWING MACHINE is designed to process and blow all of the currently available loose-fill insulations on the market today.



WARNING This equipment must be used only for the purpose for which it was intended. Any other use could cause serious injury, costly damage to the equipment and will void the warranty.

INFORMATION FOR SAFETY AND SERVICE

Type/Size _____

Serial Number _____


Date of Installation _____



SECTION III RECEIVING AND INSPECTION

Upon receipt of equipment and material from Meyer, the following basic steps should be taken. The equipment is heavy and proper handling procedures should be used (See the “**Heavy - handle safely**” information in the “IMPORTANT SAFETY INFORMATION” section.)

1. Use the packing list to determine that all the items shipped have been received. Your equipment was carefully crated for safe shipment when given to the carrier. If items are missing, contact Meyer per contact information at the end of this section.
2. Check for damage. Damage in transit is the responsibility of the carrier. Title to your equipment and all other items in the shipment were transferred to you as soon as the shipment left our dock, thus it is your responsibility to handle any claim. In the event damage has occurred:
 - Be sure to have the driver sign a copy of the freight bill with a notation about any damage and contact their office before the driver leaves your premises.
 - Contact the carrier to arrange for an independent inspector to come out to inspect the damage and prepare the inspection report. It is imperative that this inspection is done before you start to unpack or use any of the equipment.
 - If there are any visible problems with your unit or any other items in the shipment, you or the driver must note in detail the damage on all copies of the freight bill before signing for the shipment. Then immediately call Meyer.
 - Photographic records of the damage are helpful to communicate the extent and type of damage as well as provide a clear record.
 - In addition to inspecting damaged equipment, you should also check the condition of the safety labels to ensure they have not been damaged or come off. If they have, contact Meyer for replacements prior to installation.

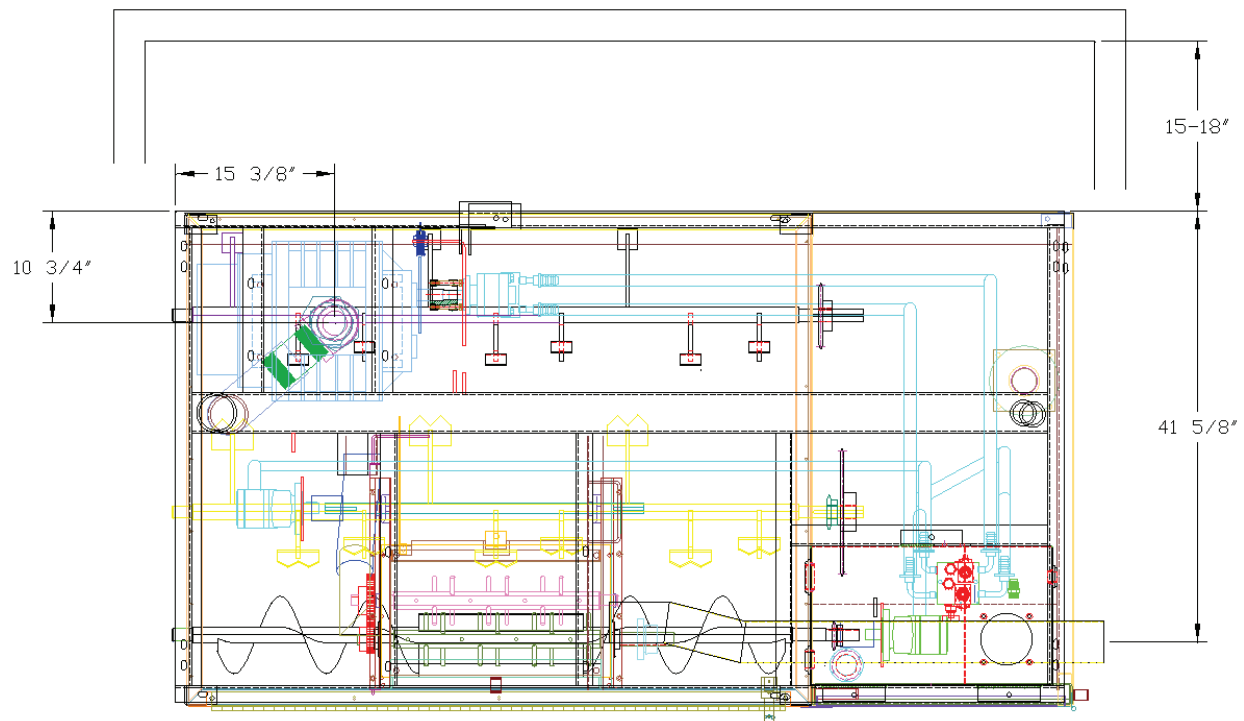

1. Move the machine into position noting that you will need to have access to the rear of the machine. With the machine in position; mark the truck floor where the base mounting holes will be located and where the blower inlet pipe will go through the floor.
2. The machine can be left in place or moved to provide better access to the areas that need to be drilled/cut. Using a 1/8" bit, drill pilot holes to determine if there is anything under the truck floor that would interfere with the mounting fasteners or the blower inlet pipe. If there is; move the holes accordingly.
3. Cut a 3 1/2" hole for the blower inlet pipe. Install the rubber flashing for blower centering it over the hole.
4. A 6" diameter hole in the floor is needed for the hydraulic hoses coming from the pumps underneath the truck. There is some leeway as to the exact hole location. The hole should be inside the machine base near the hydraulic tank. When installed, the hoses must not come in contact with any moving parts, above or below the floor, and must have smooth radius bends.
5. Drill holes for the machine mounting bolts. The size depends on what type and size of fasteners you are using. Secure the machine to the truck floor.
6. Push the blower inlet pipe with screen up through the flashing and thread it into the blower.

Power Take Off (PTO) Installation

Installation of a PTO should only be performed by a qualified installer or by Meyer Pro. Read and understand the PTO manufacturer's Installation and Operation manual. If you have purchased the hydraulic PTO installation parts with your machine, you should have everything needed for installation.

Note: Some connectors and hoses may have to be substituted based on your unique installation requirements.

The Model 1502 machine is hydraulically powered by an external dual hydraulic pump coupled to a power take-off (PTO). The pump and PTO are not included with the machine and must be ordered separately. The PTO is attached to the truck's transmission. The balance of the hydraulic system is integral to the machine. The installation is not trivial and should be performed by individuals experienced with PTO's and hydraulics. The PTO must be selected to match the particular dual pump and truck transmission. Pumps are available in both clockwise and counterclockwise rotations to accommodate the various PTO's and transmissions. Four hoses connect the pumps to the machine; two are supply hoses that route fluid from the hydraulic tank on the machine to the inlets of the pumps, two are pressure side hoses that route fluid from the pumps to the machine. The pump nearest the PTO (inboard pump) is the higher flow blower pump and its hose connects to P1 on the hydraulic block. The outboard pump hose connects to P2. The hoses must be run and supported in such a manner as to prevent them from rubbing and abrading against parts of the machine and truck. This completes the mechanical installation for the Model 1502.

Your Model 1502 was checked and thoroughly run before it was shipped, but it is always a good idea to check; all set screws, all hoses for leakage and all fluid levels.

Electrical Installation

The Model 1502 is powered electrically by the truck battery and charging system. Two cables of two wires each are provided that terminate to the truck electrical system. One cable is power for the machine and terminates at the truck battery. The other cable is connected to the PTO electrical system.

The power cable includes wires which are marked #3 and #8. #3 is a black wire (POSITIVE) marked with red tape and #8 is a white wire (NEGATIVE) marked with black tape. The red and black tape represent (+) and (-) respectively - the convention for extra-low voltage DC wiring. An in-line 30 amp slow blow fuse rated at 30 VDC should be wired between the #3 wire and the battery. Wire #8 should terminate at the negative terminal of the battery or to the frame of the vehicle.

The other cable includes wires marked #9 and #10. Terminate wire #9 to the line side of the PTO "On" indicator light in the dash. Terminate wire #10 to the load (ground) side of the light.



SECTION V MACHINE OPERATING INSTRUCTIONS

⚠ WARNING Prior to use, the operator must read and understand the entire manual and all the safety related information including all the warnings and guarding instructions. This includes but is not limited to reading and understanding the "IMPORTANT SAFETY INFORMATION" and "HAZARD IDENTIFICATION" Sections. Verify that all guarding is in place and the area is clear of all non-essential personnel. Failure to do so could lead to serious injury or death.

⚠ DANGER Engine exhaust contains carbon monoxide, a poisonous gas that will kill you in minutes. You CANNOT see it, smell it or taste it. Even if you do not smell exhaust fumes, you could still be exposed to carbon monoxide gas. Operate only in well ventilated areas. If you start to feel sick, dizzy, or weak while using this machine, shut it off and get to fresh air immediately. Seek medical attention immediately. You may have carbon monoxide poisoning.

PRE-START CHECKS

1. The operation of this machine must be limited to people that have read and understood this manual, the equipment labels, and the proper handling of the insulation material being installed.
2. Only people involved in the machine operation are in the vicinity.
3. Check that no foreign material is in the hopper.
4. The doors to the truck body / trailer must be open to provide adequate ventilation for operator and machine.
5. Check that all guards are in place.
6. The blowing hose is attached to the machine and the person manning the hose is in position.
7. Check that the switch on the Remote Control Cord is in the OFF position and connected to the control panel.

NOTICE

Starting the machine with Remote Control Cord Switch in either the AIR or AIR/MATERIAL position will overload the clutch and the engine.

MACHINE START UP INSTRUCTIONS

Read and Understand the Power Take Off Operator's manual before operating this equipment. NOTE: Failure to follow proper shifting or operating sequences will result in premature PTO failure with possible damage to other equipment.

1. Turn the Remote ON/OFF selector switch counterclockwise. (Off Position)
2. E-Stop button should be released. (Turn CW to release)
3. Engage the Power Take Off (PTO) with the truck engine at idle speed. The Power light and PTO Engaged light on the machine panel will come on.

NOTE: The engine must be at idle when the PTO is initially engaged.

4. Increase the engine speed until the machine tachometer reads 1100 RPM. Set the engine speed according to the Operator's manual for the PTO.
5. Close the slide gate.
6. Switch on the Remote by turning the ON/OFF Selector Switch clockwise. (On Position) The Remote Control is now energized and can be used to control the machine.
7. Open the slide gate and set it based on your blowing material. Turn the slide gate selector switch CCW to open (green light illuminates) and CW to close (white light illuminates).

MACHINE SHUTDOWN INSTRUCTIONS

1. Close the slide gate. (Turn selector switch CW)
2. Handheld remote:
Press the Stop button, press the Air button to clear the Hose, and then press the Stop button again to stop the machine.
3. Control Panel:
Turn the Remote ON/OFF switch CCW to OFF and disconnect the cord.
4. Reduce engine speed to idle and disengage the PTO per the manual.
5. Turn the engine ignition key to the OFF position and remove the key.

MACHINE SAFETY SHUTDOWN INSTRUCTIONS

1. Follow the MACHINE SHUTDOWN INSTRUCTIONS.
2. Disconnect the negative battery terminal and secure it.
3. Follow your employer's Lockout/Tag out procedures.

NOTICE Disengage the PTO before driving the truck. Failure to do so will cause severe damage to the insulation machine and PTO components



SECTION VI MAINTENANCE

Maintenance must be performed by qualified personnel possessing the appropriate expert knowledge for the specific task.

WARNING Lockout/Tagout the machine before performing any service or maintenance including removing any guards. Failure to do so could lead to serious injury or death.

For engine service or maintenance see the engine Operator's Manual.

Your Series 1500 Insulation Blowing Machine is designed to be used with minimal maintenance for all its components. The following is only a guide; experience is the best guide for the right maintenance schedule for your machine.

| DESCRIPTION | EACH SHIFT | 20 HRS | 100 HRS | 250 HRS | 500 HRS |
|------------------------------|------------|--------|---------|---------|---------|
| INSPECT ALL DRIVES | X | | | | |
| CHECK GUARDS | X | | | | |
| HYDRAULIC HOSE & CONNECTIONS | X | | | | |
| GREASE BLOWER BEARINGS | | | | | X |
| GREASE HOPPER BEARINGS | | | | | X |
| CHANGE BLOWER OIL | | | | | X |
| CHANGE GEAR BOX OIL | | | | | X |
| CLEAN INLET SCREEN (BLOWER) | X | | | | |
| CHANGE SEALSTRIPS | | | | | X |
| OIL DRIVE CHAINS | | | | | X |
| CHECK ALL DRIVE SET SCREWS | | | | | X |
| CHECK/CLEAN HEAT EXCH FILTER | X | | | | |
| CHECK HYDRAULIC FLUID LEVEL | X | | | | |
| CHANGE HYRDAULIC FLUID | | | | | X |
| CHANGE ENGINE OIL/FILTER | | | X | | |
| ENGINE AIR FILTER | X | | | | |
| CLEAN INLET FILTER (ENGINE) | X | | | | |
| CHECK ENGINE EXHAUST PIPE | X | | | | |

| | |
|-----------------|-------------------------------------------|
| ALL BEARINGS | NLGI grade #2 LITHIUM GREASE |
| DRIVE CHAIN | 30W NON DETERGENT MOTOR OIL |
| BLOWER | OIL: AEON NLGI grade #2 LITHIUM GREASE |
| HYDRAULIC FLUID | ISO VISCOSITY GRADE: 32 |

In order to perform any service or maintenance on the drive train the drive guards must be removed.

1. Follow the MACHINE SAFETY SHUTDOWN INSTRUCTIONS.
2. Remove the guards as necessary to work on the machine.
3. Replace the guards after completing the service or maintenance and before operation.

NOTICE When replacing or tightening the chain it is imperative that the sprockets are in line with each other. Use a straight edge of sufficient length to make the determination.

Check the tension on the chain drives when they are lubricated. On the hopper chain drives if there is more than 3/4" deflection or play measured equidistant between the sprockets, the chain needs to be replaced. The feeder drive chain tension can be adjusted via the base mounted tensioner.



SECTION VII TROUBLESHOOTING

WARNING Lockout/Tagout the machine before performing any service or maintenance including removing any guards. Failure to do so could lead to serious injury or death.

If the machine is not running properly check for the simple causes first; closed slide gate, broken chain, machine speed etc.

Machine is running but no material is discharging from hose.

- Slide gate is in the closed position.
- Feeder shear pin is broken.
- Remote Control wire or panel connector is broken or damaged.
- Remote Control wire board connections loose.
- Faulty clutch relay on circuit board or faulty circuit board.
- Drive belt is slipping or broken.
- Feeder chain is off the sprocket or broken.
- Hopper chains are off their sprockets or broken.
- Material jam in machine or hose.
- Hose is bent or closed off from machine to attic.
- Worn out seals in feeder causing air pressure blowback.

Low material output.

- Check slide gate position.
- Partial obstruction in hopper or hose.
- Hose is kinked or torn.
- Machine speed is too low.
- Blower inlet is clogged.
- Blower outlet tubing to feeder has slipped off its connection.
- Bleed valve assembly is in the open position.
- Operator is overfilling hopper resulting in material top pressure which can lead to material bridging above the feed reel.
- Material is sticking to agitator or feed reel from forcing too much material into the hopper, this practice causes less material to be conveyed through the system due to build up on surfaces.

Machine seems sluggish while blowing material.

- Material is wet inside hopper.
- Too much material forced into hopper.
- Too many hose reductions.
- Obstruction at blower inlet.
- Drive belts may be slipping.
- Gear Box oil is low or empty.
- Loose drive components.

Unusual sounds coming from machine during operation.

- Banging sound from hopper area – Loose object has fallen into hopper.
- Constant air leaking sound while machine is in operation – Bleed valve is open or loose tubing between the blower and feeder.

ATTENTION INSTALLERS/OPERATORS FOR YOUR PROTECTION:

1. Read and understand the Operating Manual accompanying this equipment before performing any work.
2. Additional safety label kits are available from Meyer upon request at no charge. This is part of our effort to ensure this equipment is installed, operated and maintained in the safest possible manner. Affix these labels in locations to achieve maximum visibility and thereby alert any personnel that may ever be on-site that a potential for injury could occur.
3. Under no circumstances should this equipment be installed or operated in a manner that permits access to the interior of the insulation blowing machine.
4. Outlet connections must always have a hose attached.
5. **Always follow machine safety shutdown instructions** before performing any work.
6. Always keep loose clothing, hands, feet or any parts of your body, tools and/or any foreign objects away from the interior of hopper and hose.
7. Never remove the discharge hose that is attached to the machine without first powering OFF the machine.
8. Consult the Meyer factory if you have any questions regarding the proper installation, operation and maintenance of this equipment.

Meyer Pro

1700 Franklin Blvd • Libertyville, IL 60048 • Phone: 847-932-6500 • Fax: 847-918-8183

Websites: <https://www.meyerpro.com> • www.wmwmeyer.com

File # 292-T-002

SAFETY LABELS

Locate all of the safety labels on your equipment and know their meaning before operating your Insulation Blowing Machine.

WARNING



Machine is operated by remote control and can start at any time.

Moving parts can crush and cut.

Follow Machine Safety Shutdown Instructions (near control panel) before removing guards, servicing, or performing maintenance or when reaching into any work zone to make adjustments, clear product and supplies, clean the equipment, or investigate a malfunction.



Follow all safety instructions to reduce the risk of serious injury or death from electrical shock, moving parts, thrown objects, or other hazards.



Intended use and use environment

This machine is suitable for Loose Fill insulation only. Any other use could cause serious injury, costly damage to the equipment and will void the warranty.

Operate only in well ventilated areas. Failure to do so could result in death due to carbon monoxide poisoning.

Questions regarding safety, operation, and application suitability should be directed to Wm. W. Meyer and Sons, Inc.



Qualifications and responsibilities

Always refer to applicable safety standards and local requirements when using this equipment.

Owner responsibilities:

- Provide operation and maintenance personnel with the Installation, Operation, and Maintenance Instructions (additional copies available from Wm. W. Meyer and Sons, Inc.)
- Make sure personnel are properly trained on equipment use and safety.



Operation and Maintenance Personnel responsibilities:

- Be properly qualified to operate or service the equipment:
 - Read and follow all instructions on the equipment labels and in the Installation, Operation, and Maintenance Instructions, including appropriate supporting vendor information.
 - Never operate or maintain this equipment under the influence of alcohol or drugs or conditions which reduce alertness or judgment.
- Always wear proper hearing, eye and breathing protection along with protective clothing.



Operating location

- An operator must always be close enough to the machine to promptly turn it off in case of emergency.
- Never blow insulation on or near sources of heat, flame, sparks or static discharge.



Keep yourself and others clear of machine and discharge

- Never operate the machine without all guards properly installed.
- Keep hands, feet, hair, loose clothing, jewelry and any foreign objects away from moving parts during operation.
- Never allow untrained personnel in the area near the equipment or the air/material discharge location.
- Never direct discharged materials at bystanders or put hands or objects in the discharge stream.



DO NOT REMOVE or disfigure this or any other instruction/safety label.

1700 Franklin Blvd • Libertyville, Illinois 60048-4407 • 800-797-8227 • 847-918-0111 • Fax: 847-918-8183

e-mail: info@wmwmeier.com • websites: <http://www.meyercontractor.com> or www.wmwmeier.com

4202-262



WARNING

Hydraulic fluid is flammable. Keep away from heat and ignition sources.

Clean up any spills using only non-sparking tools and explosion proof equipment. Collect spills on absorbent material and put into an approved container.

4202-301



WARNING

Hydraulic fluid under pressure can cause skin injection injury.

If you suspect an injury, no matter how minor it may seem, get medical attention immediately. Failure to do so can lead to gangrene and loss of limb.

Follow Machine Safety Shutdown Instructions before any inspections, service or maintenance is performed.

4202-302

HYDRAULIC SYSTEM INSPECTION INSTRUCTIONS

With the truck securely parked and the machine unable to start, inspect the hydraulic system both on the machine and underneath the truck for:

- Leaks
- Loose connections
- Damaged/Worn parts

Replace any damaged or worn parts immediately. Do not operate the machine until after necessary repairs have been made.

If there are any questions about inspecting the hydraulic system, please do not hesitate to contact us at 1-800-963-4458


420Z-300



! WARNING

**Hot surface.
Do NOT touch.**

420Z-233

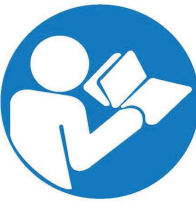


! WARNING

To reduce the risk of serious injury or death:

Equipment must be operated, serviced and maintained by trained personnel.

Read and understand all instructions before operating, servicing or maintaining this machine.



! WARNING

Moving parts can crush and cut.

Never operate with guard removed.

Follow machine safety shutdown instructions before service or maintenance.

420Z-253

! WARNING



Hearing protection required Eye protection required Breathing protection required Protective clothing required

420Z-204



! WARNING

Unprotected material discharge can cause injury.

Always use hose when discharging material.

Never direct discharged materials at bystanders or put hands or objects in the discharge stream.

420Z-217



! WARNING


FIRE Hazard

Disconnect fuel tank when not in use.

Secure tank when transporting machine.

Do not store fuel tank in enclosed space.

420Z-250




! DANGER

Rotating parts inside.

Follow machine safety shutdown instructions before service or maintenance.

420Z-249



! WARNING

Open all doors on the truck body/trailer and wait 10 minutes before starting engine.

This ventilates fuel vapors and reduces the risk of fire and explosions.

DO NOT start engine if fuel vapors are present.

420Z-258




! DANGER

Engines produce **carbon monoxide** which is an odorless deadly poison.

DO NOT OPERATE in an enclosed area.

420Z-234



! WARNING

Do not reach into hopper.

Moving parts can crush and cut.

Follow machine safety shutdown instructions before service or maintenance.

420Z-280

NOTE: Contact Meyer Pro at 847-932-6500 for free replacement safety label kit.

SERIES 1500 INSULATION BLOWING MACHINE SAFETY PRECAUTIONS

Model 1505A

MACHINE SAFETY SHUTDOWN INSTRUCTIONS

Before reaching into the machine or performing any service or maintenance, the following steps must be taken to ensure that the machine cannot be started or operated.

1. Follow the Machine Shutdown Instructions.
2. Disconnect the fuel tank and close the vent on the tank.
3. Disconnect the negative battery terminal and secure it.
4. Follow your employer's Lockout/Tagout procedures.

420Z-258

Model 1502

MACHINE SAFETY SHUTDOWN INSTRUCTIONS

Before reaching into the machine or performing any service or maintenance, the following steps must be taken to ensure that the machine cannot be started or operated.

1. Follow the Machine Shutdown Instructions.
2. Disconnect the negative battery terminal and secure it.
3. Follow your employer's Lockout/Tag out procedures.

420Z-305



NEVER OPERATE THE MACHINE WITHOUT GUARDS IN PLACE

NEVER OPERATE THE MACHINE WITHOUT HOSE ATTACHED TO THE DISCHARGE TUBE